




BY Oldcastle® Enclosure Solutions

## INSTALLATION INSTRUCTIONS – Pg. 1

**LOCAL CODES:** Local plumbing codes shall govern installation requirements. Ensure that all applicable national, local building codes and safety rules are observed throughout the installation.

**EXCAVATION:** Plan excavation approximately three to six inches (3"-6") longer and wider than the actual dimensions of the HosEnclose™ Unit. Provide for drainage with crushed rock. Excavate two to three inches (2"-3") deeper than the overall height of the unit. See illustration details below.

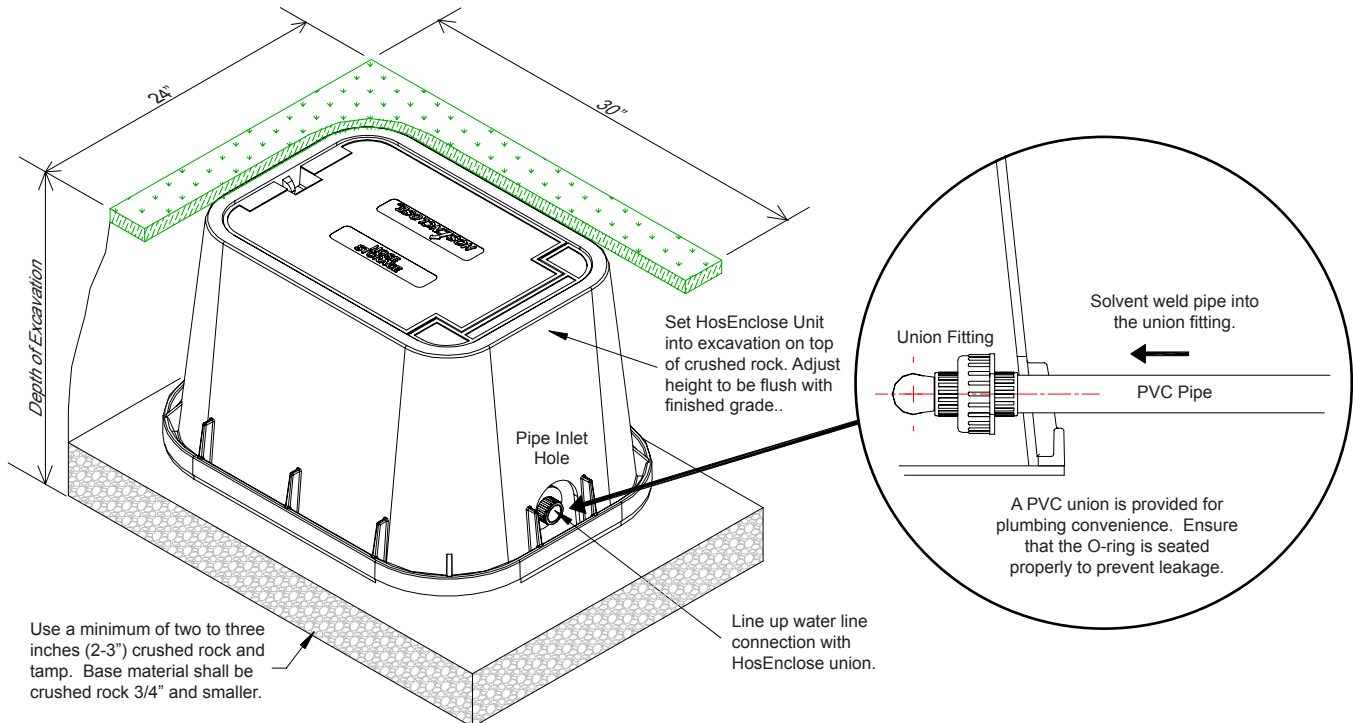

**BACK FLOW PREVENTION:** The Uniform Plumbing Code recommends that the potable water supply be protected from backflow with an approved backflow prevention device (2000 UPC, Section 603.4.6). Backflow protection shall be provided by one of the following devices:

1. Atmospheric vacuum breaker
2. Pressure vacuum breaker
3. Reduced pressure backflow preventer

Refer to local codes for specific backflow prevention requirements. (See opposite page for typical installation details)

**INSTALLATION DETAILS:** See reverse side of page.


**Cold Weather Applications:** For installations in areas susceptible to freezing temperatures, adequate drainage and freeze protection must be provided.

Limited one year warranty.



### INSTALLATION TO EXISTING IRRIGATION SYSTEM (TYPICAL):

No additional backflow device needed if one is already installed.

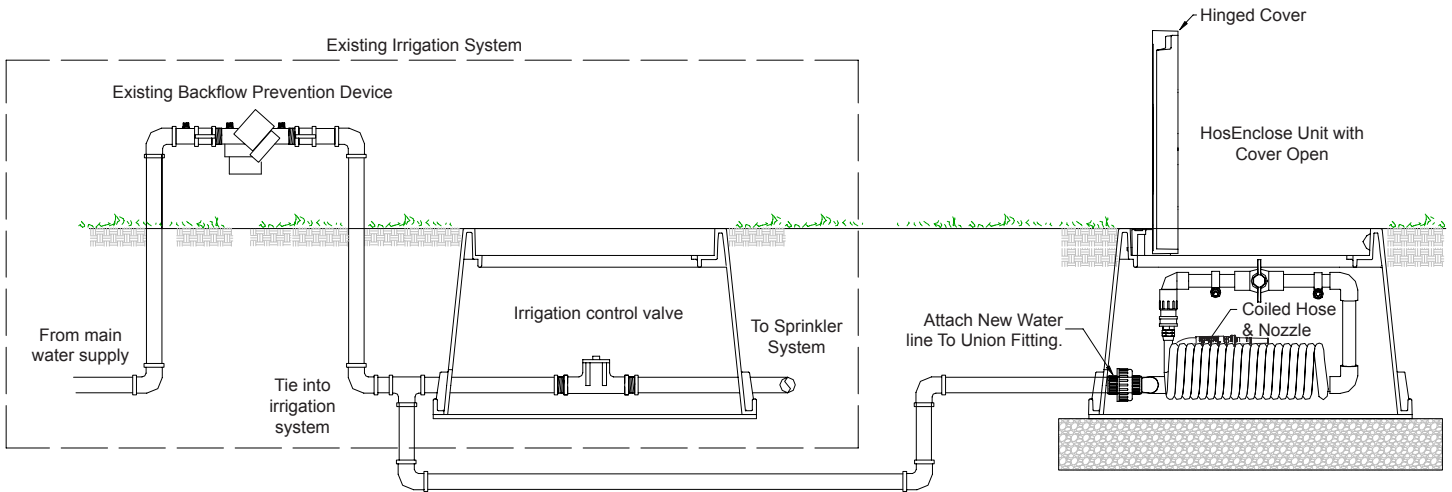

### INSTALLATION TO EXISTING HOSE BIB:

Install a backflow prevention device per Section 603.4.6, UPC 2000)

